 
 
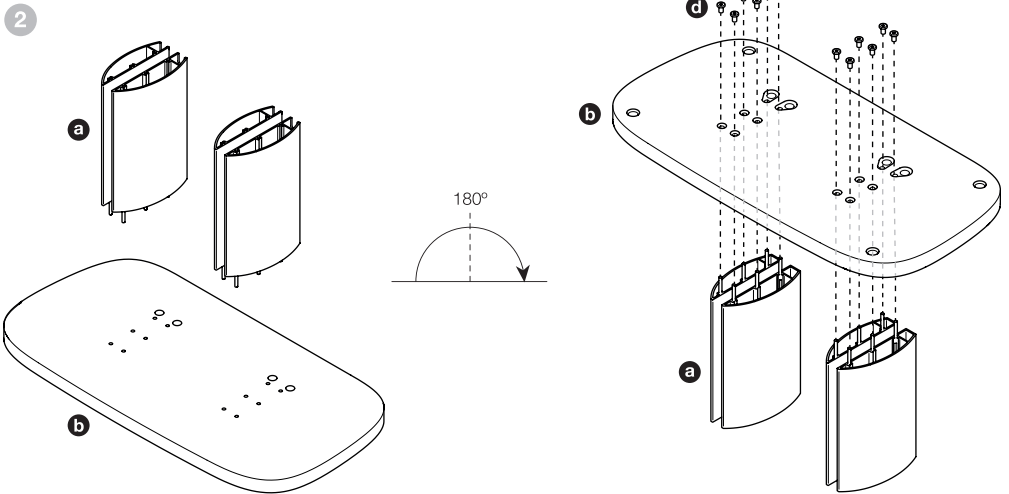 
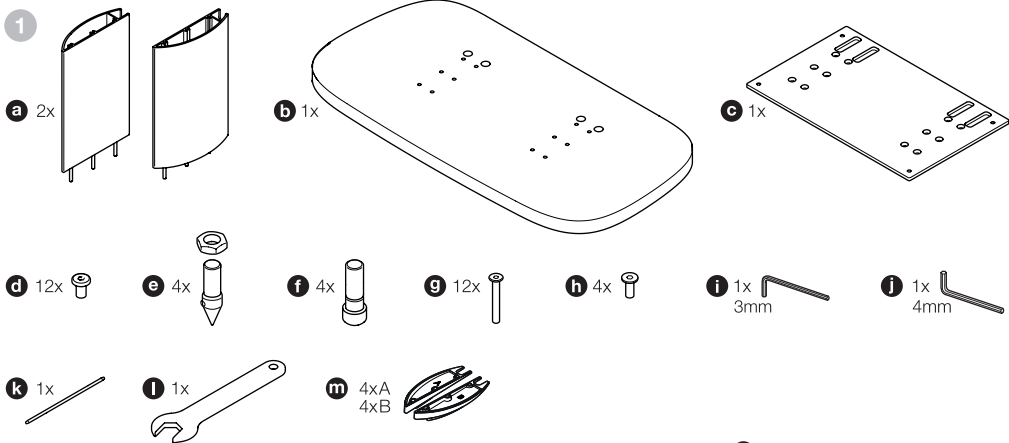 
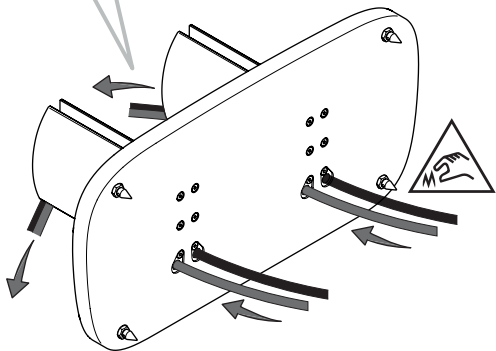 
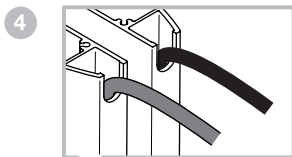 
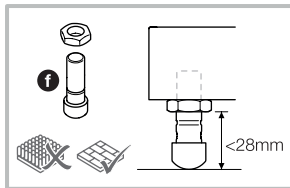 
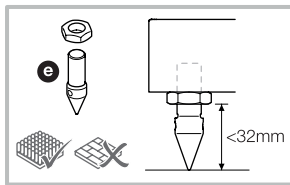 


FS-HTM D4

 
Assembly Instructions

 
 
 
 
Bowers & Wilkins

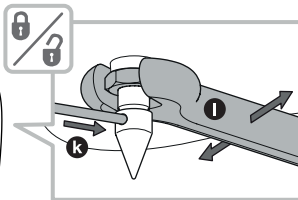

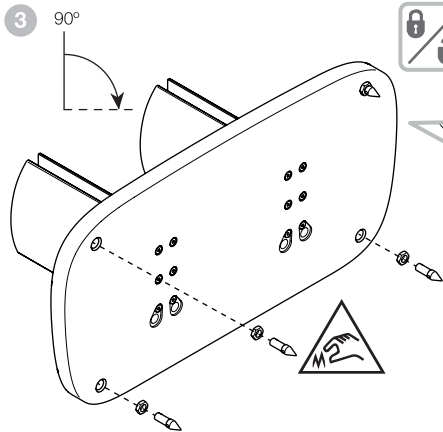

5

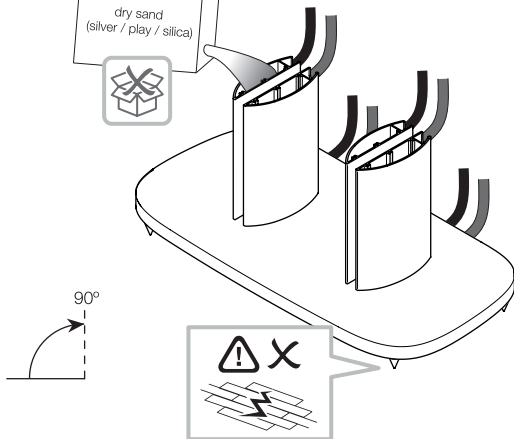

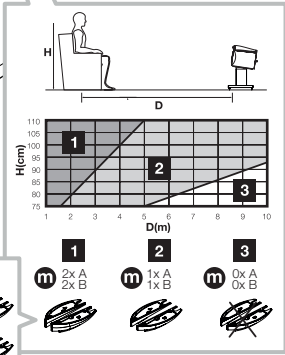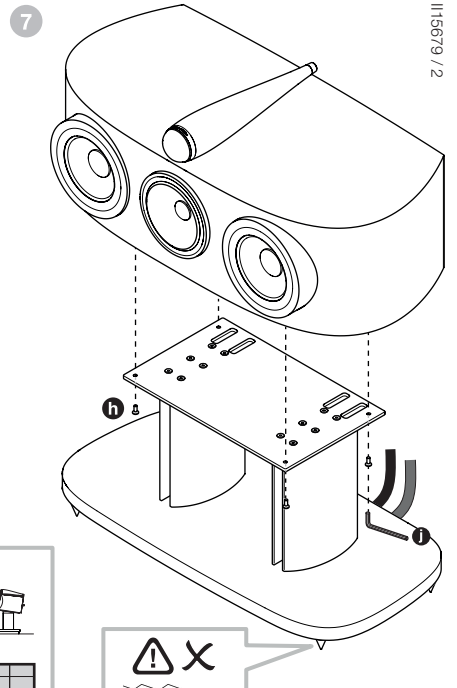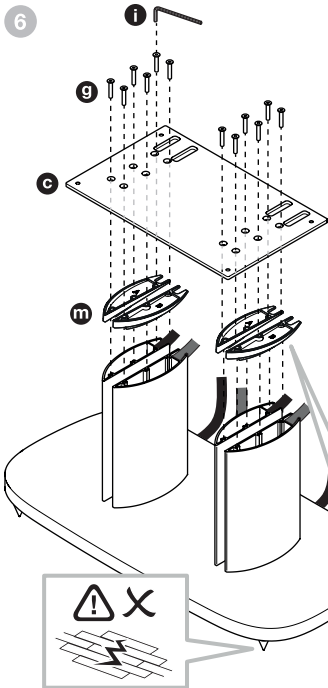

B&W Group Ltd
 Dale Road
 Worthing West Sussex
 BN11 2BH England

EU Importer:
 Bowers & Wilkins
 Beerndstraat 11
 5653 MA Eindhoven
 The Netherlands

